



Gable roof / Satteldach


1. Foundation beams to each other with 6.0x140 screws

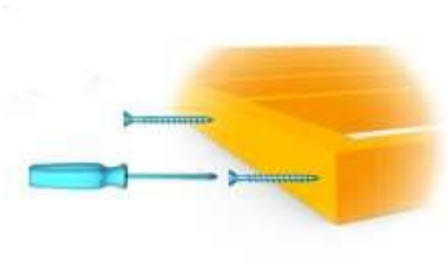


2. Bottom 57 log to foundation beam with 5.0x70 and bottom 114 log to foundation beam with 6.0x140 screws (including corners)

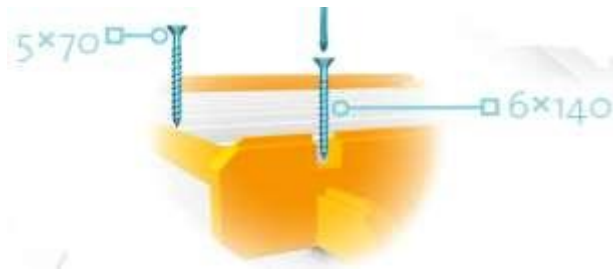


3. 114 log on top of 57 log with 6.0x140, corners with 5.0x70 screws

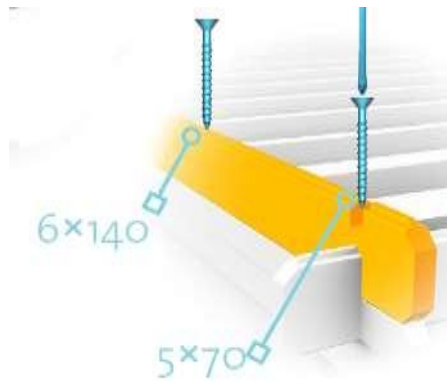


4. Top log corners with 6.0x140 screws

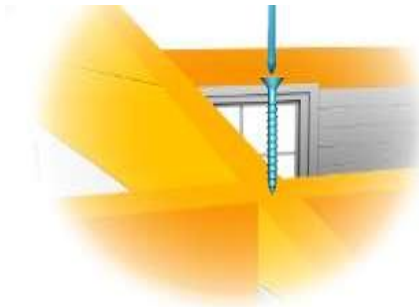

5. Purlins to wall with 6.0x140 screws

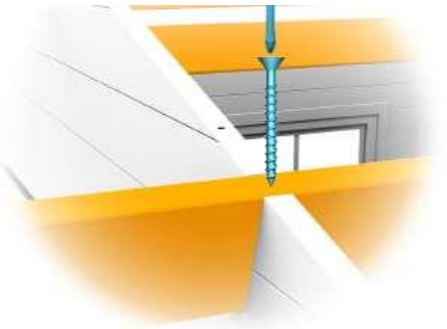

6. Roofboards to purlins and top logs with 4.0x40 screws

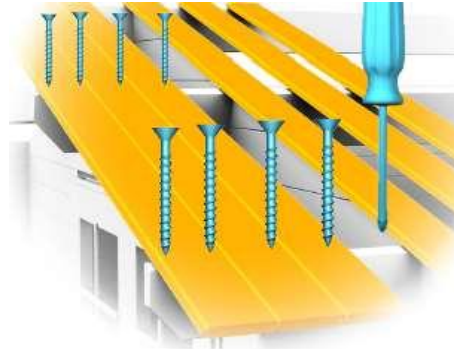

7. Roof reinforcements with 4.0x40 screws




8. Gable boards with 4.0x40 screws




9. Romb with 4.0x40 screws



10. Floorboards with 4.0x40 screws

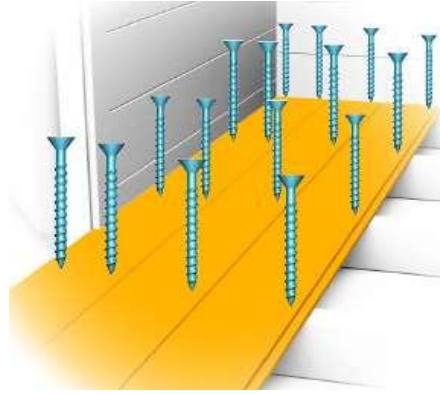

11. Baseboard with 1.4x40 nails

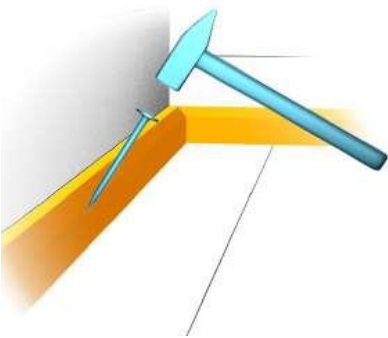

12. Winboard with bolts

